
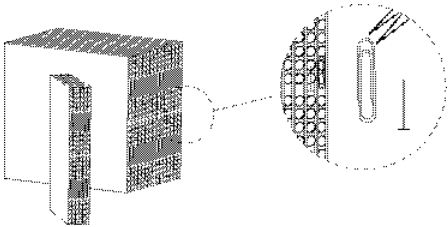
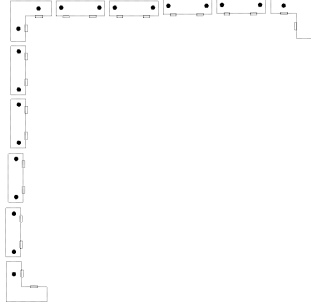
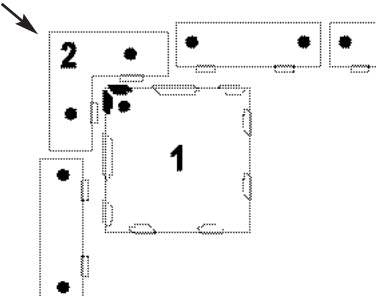
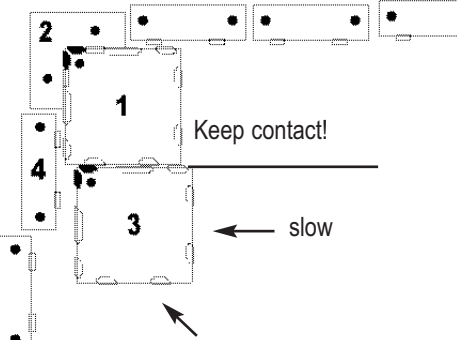
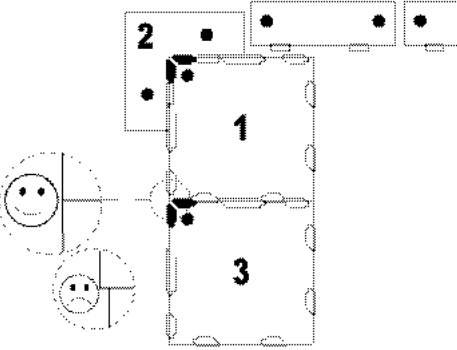
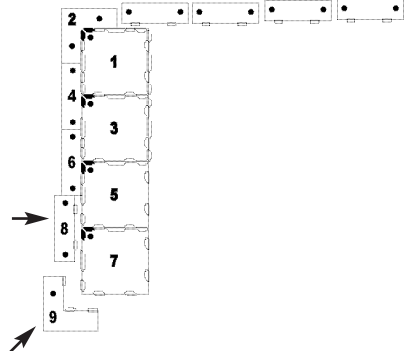
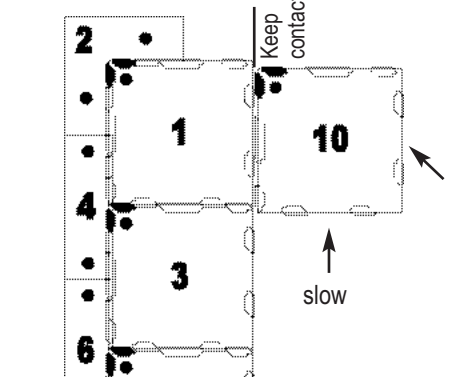
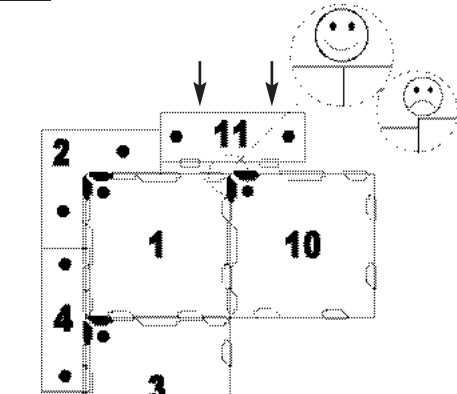
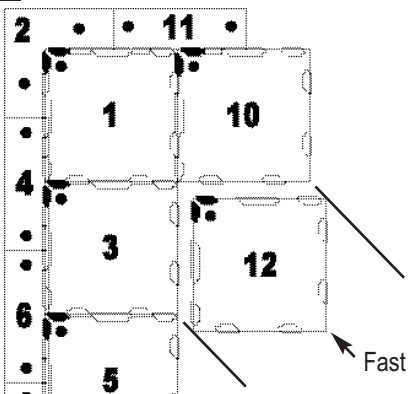
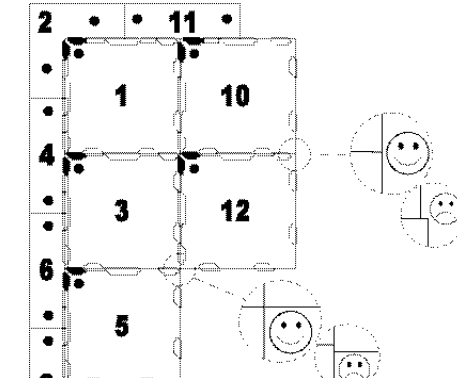
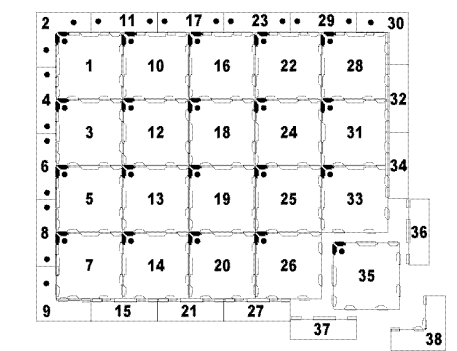


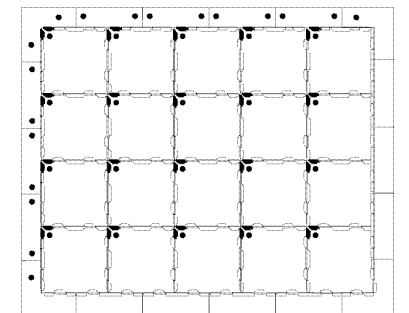


Assembly Instructions

<p>1 REMOVE DEBRIS from all panels and edge trim</p> 	<p>2 LAY OUT all black-dotted edge trim as shown for desired floor position</p> 	<p>3 CONNECT corner-trim with two black dots to 1st panel</p>  <p>Note! Put panels on ground with black steel (black dot) pointing to upper left as shown.</p>
<p>4 SLIDE next panel up and left</p> 	<p>5 SQUARE panels (no gaps)</p> 	<p>6 FOLLOW numbered order Attach trim as you go</p> 
<p>7 SLIDE top row panels left and up</p> 	<p>8 SQUARE panel and lock edge</p> 	<p>9 INSERT nested panels DIAGONALLY</p> 
<p>10 SQUARE panel</p> 	<p>11 REPEAT steps 7 thru 10</p> 	<p>12 ENSURE all edge-trim is squared and tightly locked</p> 


(See other side for disassembly instructions)

Disassembly Instructions


1 **STORE** panels on cart, parquet to back, as shown. Orient panels with black steel/dot in the lower left corner.

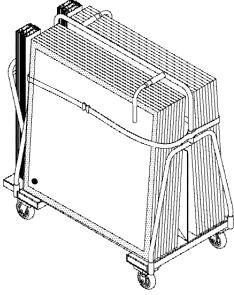


2 **LIFT UP** all straight edges & stack on cart

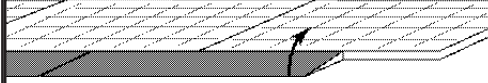


3 **SWIVEL OFF** corners, keeping level to ground - (**Do not lift up!**)

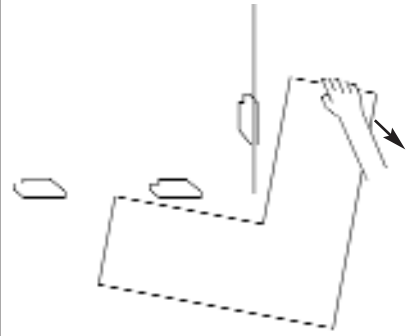


4 **IMPORTANT!** Start disassembly **OPPOSITE** the black steel corner.

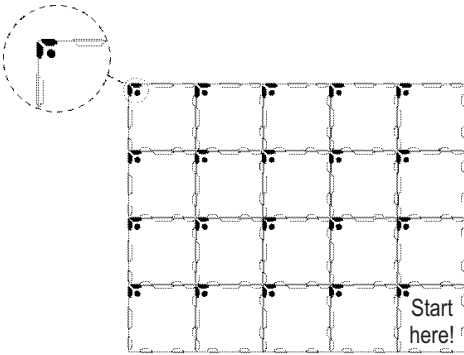


5 Disengage panels in order shown

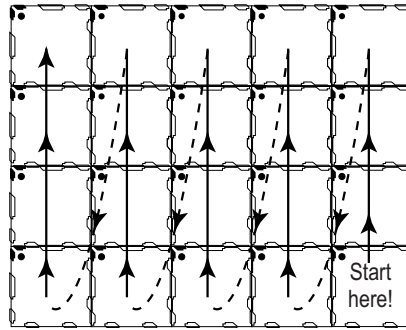

6 **INSERT** disengager lever (provided) between panels

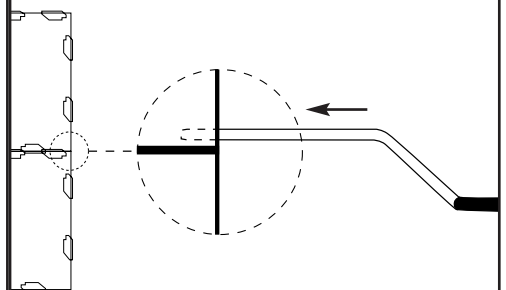

7 **PULL QUICKLY** to break magnetic connection.

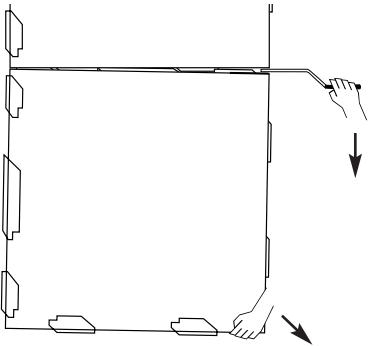

! It is imperative that the disengager lever be used to disengage each panel. Do not lift panel corner to pry panels apart as this may damage the panel. Disengaging panels in a way other than the prescribed way (using disengager lever) may damage the panel and void the warranty.

